

# Instructions for Canopy kits

## WARNING:





Electrical Danger



Turn Power Off


All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

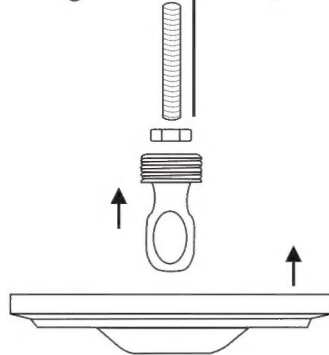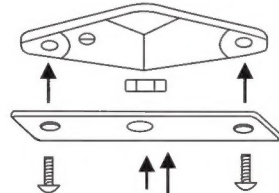


You will need 8 - Can. Bulb  
40 Watts Recommended  
60 Watts Max  
Bulb not included.



USE THE CHAIN  
PLIERS OPEN &  
CLOSE THE CHAIN.

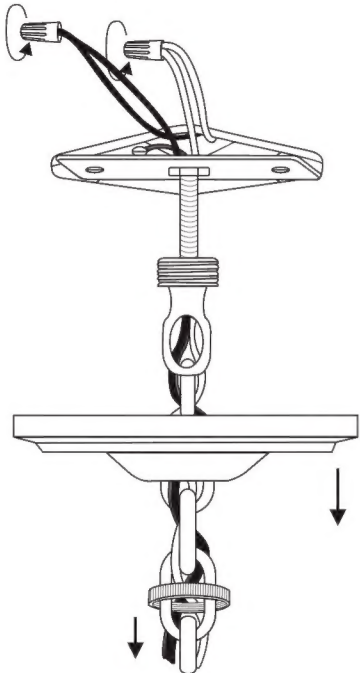

# ITEM NUMBER:# 32317 INSTRUCTIONS

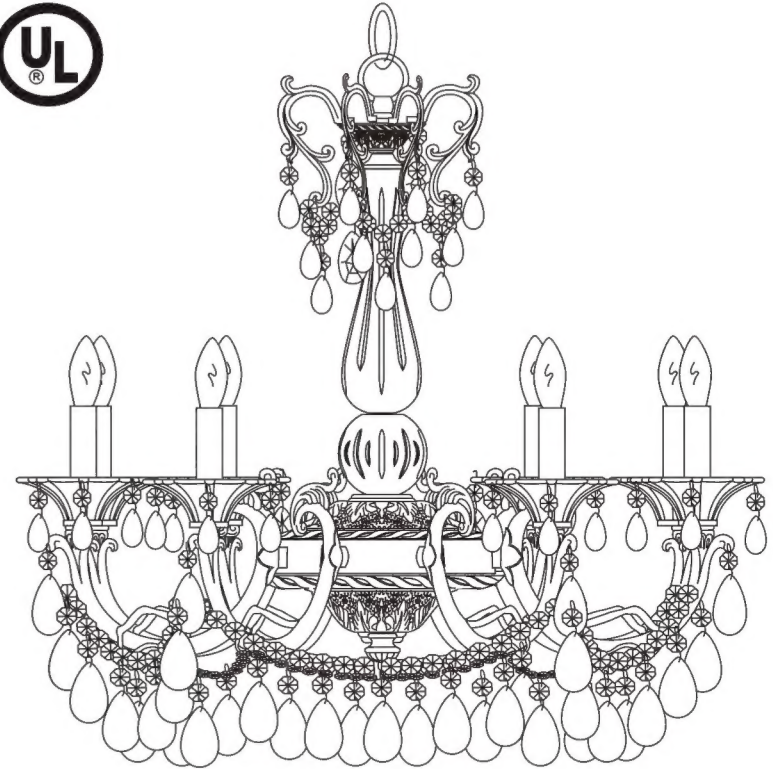

TRIARCH INTERNATIONAL

# MODEL#:32317 ASSEMBLY AND DRESSING INSTRUCTIONS


## Step 1 (Assembly for your fixture)


A ] Carefully unpack your new fixture.


B ] Simply turn on the column to attach the fixture body.

## Step 2


Hanging the crystal trim to the fixture.

A  (14mm+63mm)\*56sets


B  (14mm+48mm)\*40sets


C  (14mm\*6+A)\*16sets

D  (14mm\*12+A\*2)\*8sets

E  (14mm\*8+H) 8sets

F  (14mm\*10+63mm)\*8sets

G  (14mm\*9+50mm)\*1set

H  (14mm\*2+63mm)\*16sets

